


# JP901 Exploded View

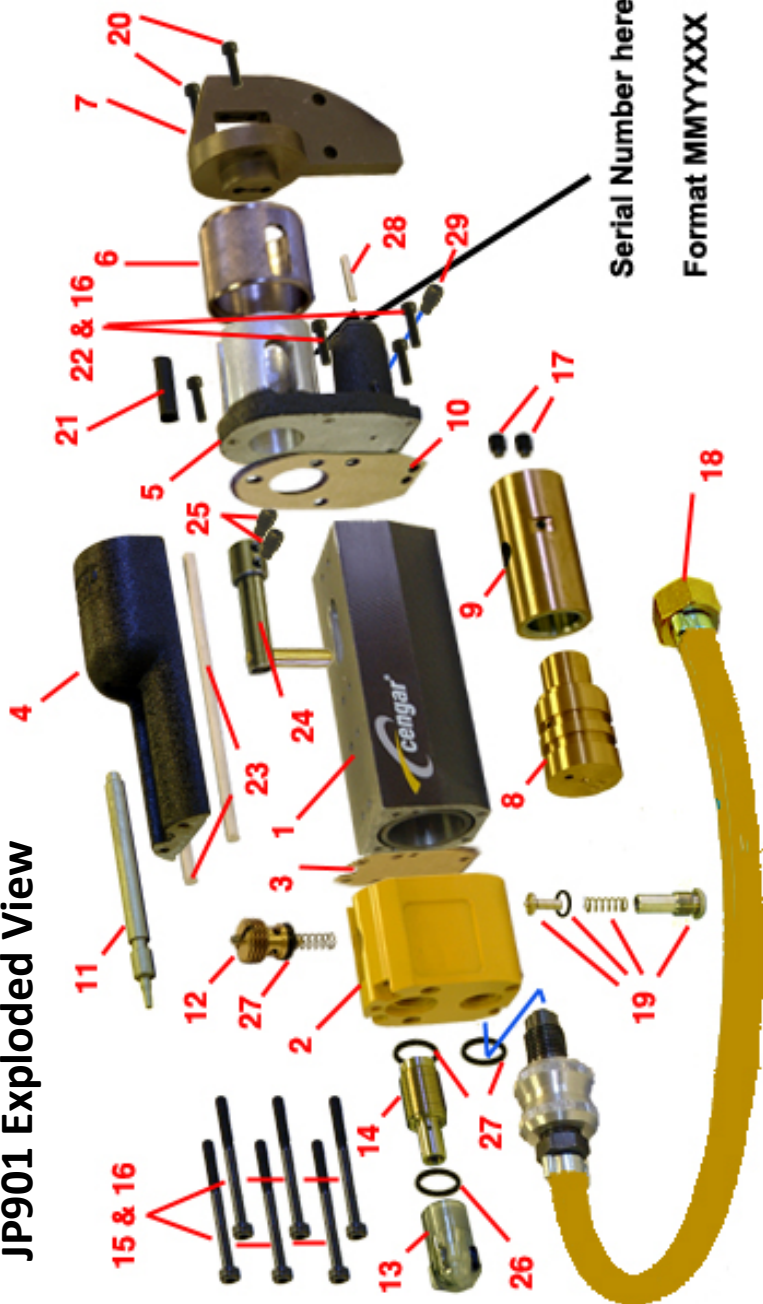

Serial Number here  
Format MMYXXX

Item	Part No.	Description	Number Per Tool	Item	Part No.	Description	Number Per tool
1	9337	Body	1	18	9331C	Hose Isolator Assy	1
2	9335	Valve Unit	1	19	9334L	Starter Valve Assy	1
3	9336	Gasket rear	1		9334D	Starter Body Long	1
4	9339	Top Cover	1		9334C	Starter Spindle	1
5	9341	Front end	1		9334A	Starter Spring	1
6	9342	Silencer Guard	1		5007	Starter Seal	1
7	5045	Nosepiece	1	20	50412	Screws—Nosepiece	2
8	2253	Piston Rear	1	21	9343	Silencer Steady	1
9	2252	Piston Front	1	22	54200	Screws Front end	5
10	9340	Gasket Front	1	23	9338	Seal—Top Cover	2
11	9333	Trigger	1	24	9344	Pedestal	1
12	50034	Valve in Handle	1	25	5068	Blade Grip Screws	2
13	2257	Oil Cup	1	26	5206	Seal—Oil Cup	1
14	9332	Oiler	1	27	5108	Seal - Various	3
15	54500	Screw Valve to Body	6	28	93412	Bleed Tube	1
16	W54	Serrated Washer	11	29	5056	Bleed Screw	2
17	5068	Screw to pedestal	2		AK3	Allen Key	1