


CS75 Exploded View

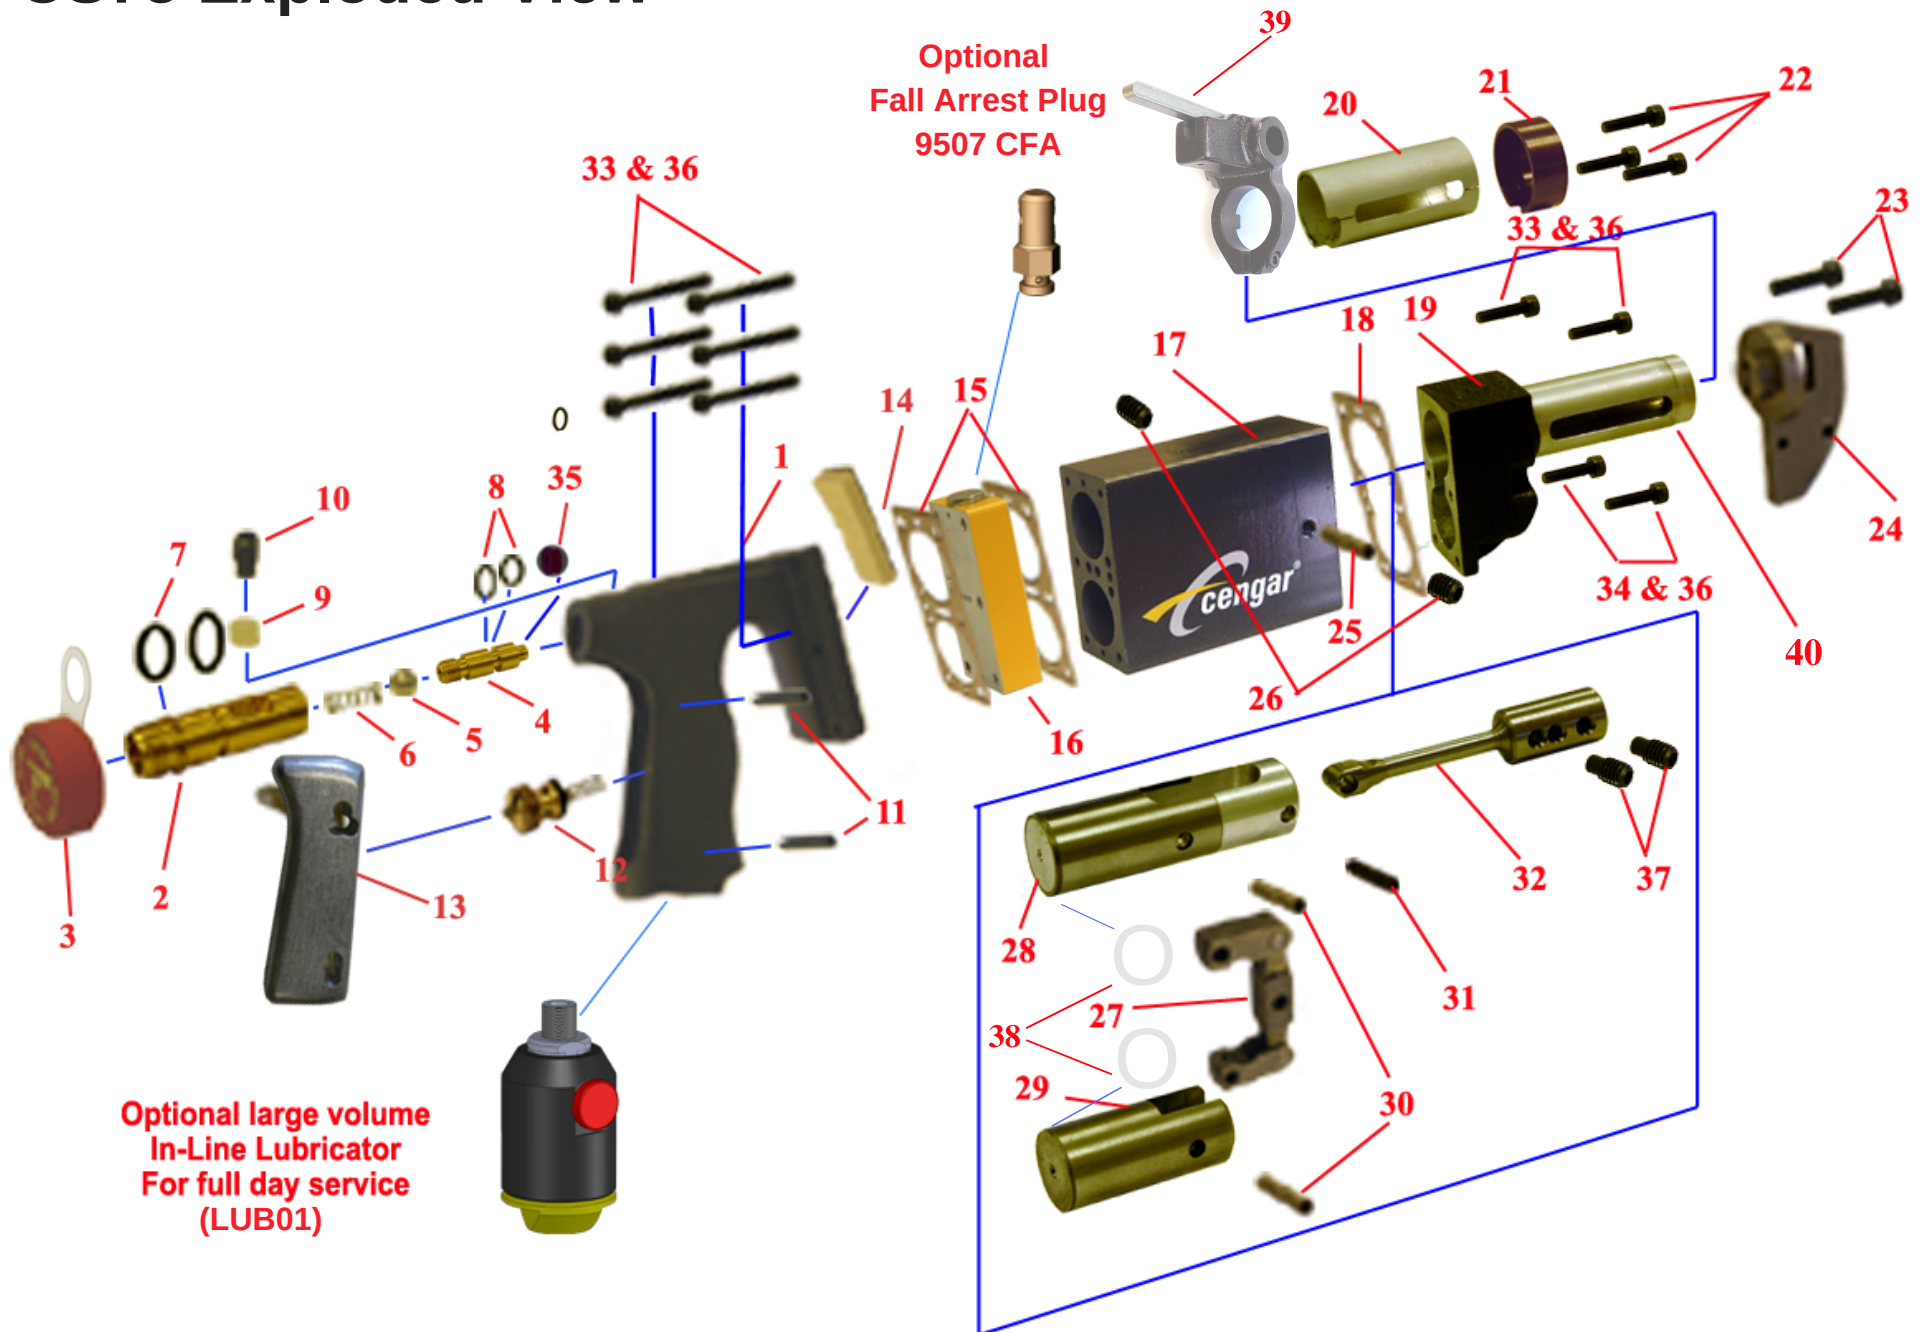

Item	Part No.	Description	Number Per Tool	Item	Part No.	Description	Number Per Tool
1	9550	Handle	1	21	1143A	Front End Cap	1
2	9554	Isolator Body	1	22	54160	Front Cap Screws	3
3	9553	Oil Cap & Retainer	1	23	54160	Screws - Nosepiece	2
4	9555	Isolator Nozzle	1	24	5075	Nosepiece (3/4")	1
5	9559	Oil Control Ball	1	25	1147	Centre Shaft	1
6	9334A	Spring	1	26	55516	Screws for above	2
7	9561	'O' Ring Large	2	27	1150	Link to Pistons	1
8	9560	'O' Ring Small	2	28	1248	Top Piston	1
9	9557	Détente Spring	1	29	1252	Bottom Piston	1
10	9556A	Lock Screw	1	30	1147	Pin to Link	2
2 to 10	9552	Isolator Assembly		31	1147	Pin to Pedestal	1
11	51834	Roll Pin-Trigger	2	32	1153-5	Pedestal	1
12	50034	Valve in Handle	1	33	5540	Screw-Handle Front	8
13	9502	Trigger	1	34	5520	Screw-Front Lower	2
14	9506	Filter/Gauze	1	35	9564	Isolator Seal	1
15	9538	Gasket	2	36	W55	Serrated Washer	10
16	9507	Valve Unit	1	37	5068	Screw-Blade Grip	2
17	1241L	Body	1	38	9510	Piston Seal	2
18	1142	Gasket – Front End	1	39	CR1	Carrier for Clamp	1
19	1243	Front End Complete	1	40	-	Serial Number-	
20	SG1	Silencer Guard	1				